

# M\_Q135.h

 
```

/*****
/!
@file      MQ135.h
@author    G.Krocker (Mad Frog Labs)
@license   GNU GPLv3
@section   HISTORY

v1.0 - First release
*/
/*****
#ifndef MQ135_H
#define MQ135_H
#if ARDUINO >= 100
  #include "Arduino.h"
#else
  #include "WProgram.h"
#endif

/// The load resistance on the board
#define RLOAD 10.0
/// Calibration resistance at atmospheric CO2 level
#define RZERO 65
/// Parameters for calculating ppm of CO2 from sensor resistance
#define PARA 116.6020682
#define PARB 2.769034857

```

- [Rzero](#) is the value of the resistor in the MQ-135 sensor in the presence of clean air. Where the CO<sub>2</sub> value is around 397.13 ppm as given below. The Rzero value varies for each individual sensor and can be found using another Arduino code
- RLOAD meanwhile is the external resistor value that is connected to the MQ-135 sensor, which in this case is 10kΩ.
- Important parameters are for calculating CO<sub>2</sub> of 116.6 and 2.79 are taken from a calibration graph as seen from the [datasheet](#). This shows the sensitivity of the sensor varies for each gas.  amc2021:extras:screenshot\_2021-09-03\_at\_01.11.54.png

```

/// Parameters to model temperature and humidity dependence
#define CORA 0.00035
#define CORB 0.02718
#define CORC 1.39538
#define CORD 0.0018

/// Atmospheric CO2 level for calibration purposes
#define ATMOCO2 397.13

class MQ135 {
private:
  uint8_t _pin;

```

```
public:
  MQ135(uint8_t pin);
  float getCorrectionFactor(float t, float h);
  float getResistance();
  float getCorrectedResistance(float t, float h);
  float getPPM();
  float getCorrectedPPM(float t, float h);
  float getRZero();
  float getCorrectedRZero(float t, float h);
};
#endif
```

From: <https://wiki.eolab.de/> - HSRW EOLab Wiki

Permanent link: <https://wiki.eolab.de/doku.php?id=amc2021:group1:extras:mq-135:start&rev=1630626622>

Last update: **2021/09/03 01:50**

