

NVIDIA Jetson Nano Setup

Changing Runlevel

```
# Temporary
sudo systemctl isolate multi-user.target

# Permanent
sudo systemctl set-default multi-user.target
```

From:
<https://wiki.eolab.de/> - **HSRW EOLab Wiki**

Permanent link:
<https://wiki.eolab.de/doku.php?id=projects:jetson:nano:start&rev=1686400289>

Last update: **2023/06/10 14:31**

