

# Plant Pot Scale

Goal: Development of Wifi or BLE enabled scale to measure the weight of plant pots for an experiment of Anna-Lea.

## Range Estimation

The intended pot size has  $d = 20\text{ cm}$  diameter and a volume of  $V = 7.5\text{ L}$ .

The following rough estimate yields just design values for the expected dynamic range.

### Maximum Mass: Saturated Sand

Assumptions (This worst case does not occur in practice, because the use of sand is not quite likely): Pot completely filled with sand, density of sand  $\rho_s = 1.6\text{ kg/L}$ , porosity  $\eta = 40\%$  (depends strongly on compaction), pore space completely filled with water (density  $\rho_w = 1\text{ kg/L}$ ). The total mass  $m$  is the sum of mass  $m_s$  of sand and  $m_w$  of water:

$$m = m_s + m_w = \rho_s \cdot V + \eta \cdot \rho_w \cdot V = (\rho_s + \eta \cdot \rho_w) \cdot V = (1.6 + 0.4 \cdot 1)\text{ kg/L} \cdot 7.5\text{ L} = 15\text{ kg}.$$

Here the mass of the plastic pot itself is neglected!

Dry sand alone would have a mass of  $m_s = \rho_s \cdot V = 12\text{ kg}$

Maximum mass of water under saturation:  $m_w = \eta \cdot \rho_w \cdot V = 3\text{ kg}$

It follows:

$$1\text{ L} \cdot \frac{3000}{40}\text{ g} = 75\text{ g}.$$

For Sand			
Saturation %	Volumetric Water Content $\eta$	Mass of Water $m_w$	Total Pot Filling Mass $m$
0%	0%	0 g	12000 g
100%	40%	3000 g	15000 g

### Minimum Mass: Dry Potting Soil

Density of potting soil:  $\rho_p = 0.5\text{ kg/L}$

Mass of dry potting soil:  $m_p = \rho_p \cdot V = 3.75\text{ kg} = 3750\text{ g}$

## Design Values

Design dynamic range of the pot irrigation experiments:  $3000\,\mathrm{g} \leq m \leq 15000\,\mathrm{g}$

The scale should be designed for  $20\,\mathrm{kg}$  max weight (mass).

## Futher Specs

### Load Cell

Max mass of  $20\,\mathrm{kg}$ , based on the dedicated HX711 24-bit ADC, e.g. from [Joy-IT](#), e.g. sold by [Reichelt](#)

According to the [datasheet](#) the accuracy is  $0.02\%$  of full scale (F.S.), i.e.  $0.02\% \cdot 20\,\mathrm{kg} = 2 \cdot 10^{-4} \cdot 20\,\mathrm{kg} = 4 \cdot 10^{-3}\,\mathrm{kg} = 4\,\mathrm{g}$ .

This corresponds to a volumetric water content (sand example above) of  $\Delta \Theta \approx 1/20 \cdot 100\%$ . This is much more than needed in real experiments.

We would rather assume an experimental measurement error of at least(!)  $1\%$ . The tree in the pot is growing, too, and changes the total mass measures by the scale!

### MC

- Wifi or Bluetooth enabled microcontroller

### Powerbank

- Battery driven, i.e. with USB power bank ( $5000\,\mathrm{mAh}$ )

### PP Menu Bowl


Outer size: Breite 178 mm, Länge 227 mm, Höhe 49 mm

Usable inner size: Breite 157 mm, Länge 207 mm, Höhe 48 mm

<https://www.gastroschreibwaren.de/eshop/info/menu-schale-pp-ungeteilt-schwarz-227-x-178-x-50-mm-50-st>



### First Prototype

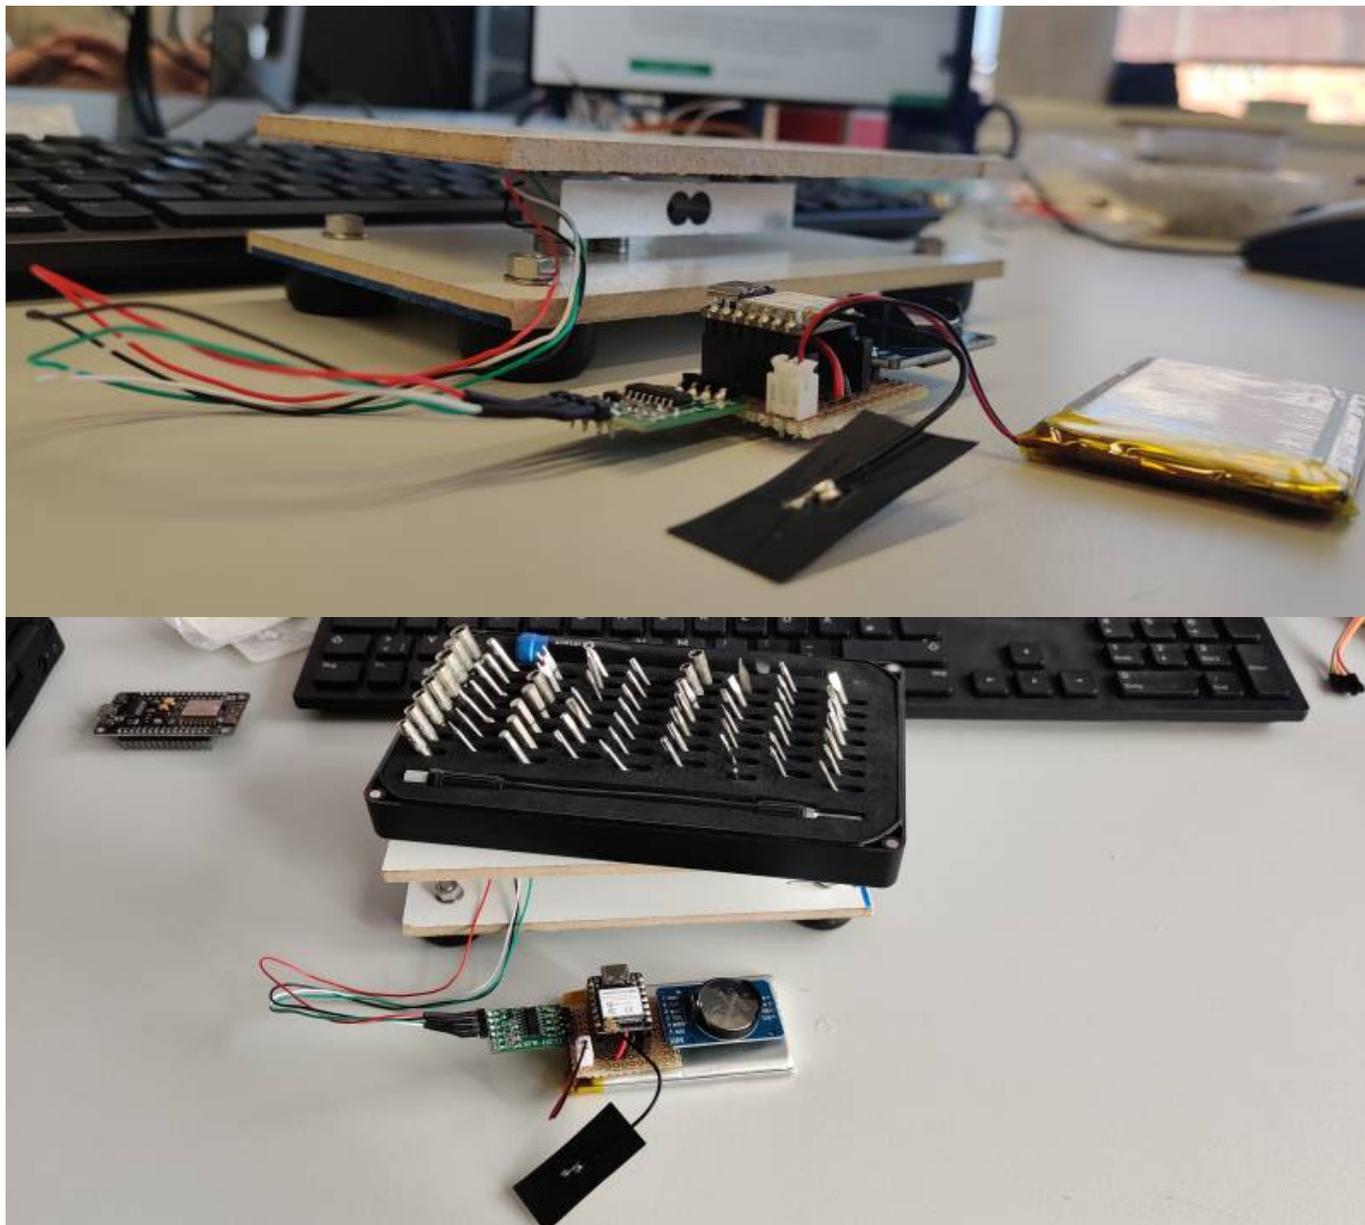


Hardware:

hardware	product page
ESP32S3	<a href="#">seedstudio</a>
20kg load cell with hx711 adc	<a href="#">reichelt</a>
ds3231 real time clock	<a href="#">makershop</a>
2000 mAh LiPo-battery	<a href="#">eckstein</a>


### Operation

The first prototype is powered by a [Seeed Studio XIAO ESP32S3](#) microcontoller. It is chosen because of its low deepsleep current and its built-in lipo-charging controller. To keep track of time, a ds3231 real time clock is used. It is programmed to send an alarm to the microcontroller every full hour. Once the alarm is received, the ESP wakes up from its deepsleep state and tries to connect to a wifi network. It then synchronizes the time of the rtc with an ntp server, reads the hx711 adc and sends the measurement to an mqtt broker. From there the data goes to a node red server and is then saved in an influx database. After sending, the microcontroller goes back to its deepsleep state, until its interrupted by the rtc again.

## Hardware Setup

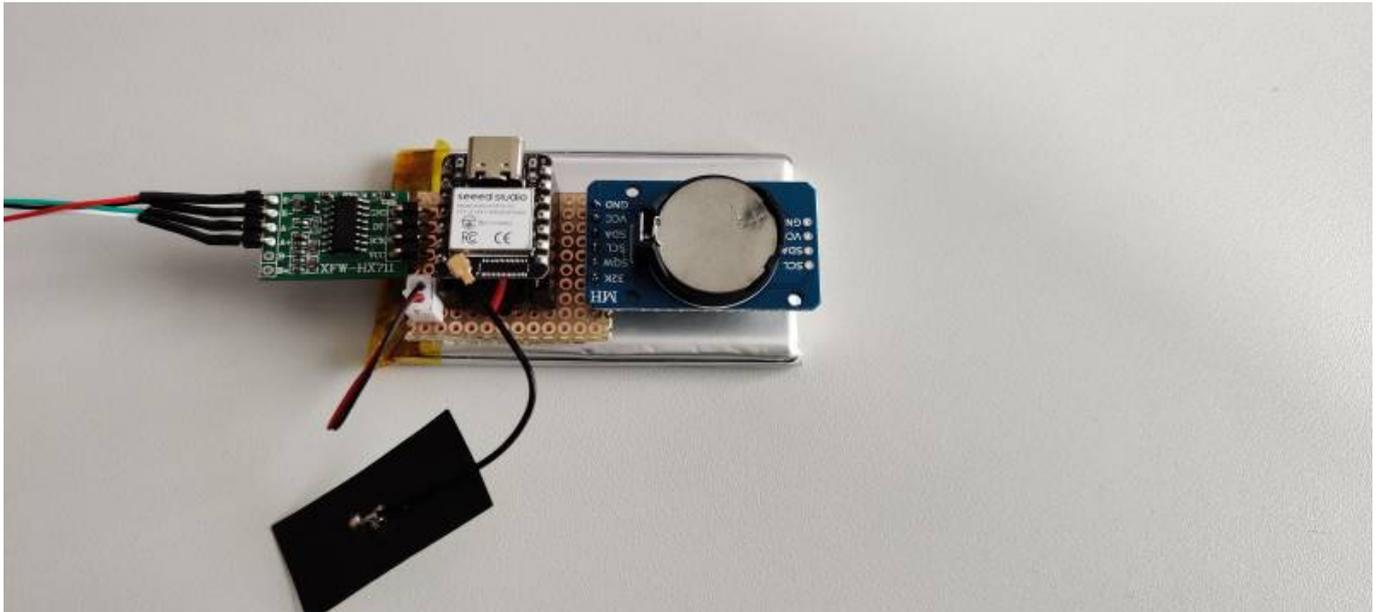

The electronics are mounted on a small piece of perfboard. The interrupt signal from the rtc needs to be pulled up while inactive. On the breakout that we used, the interrupt line is pulled to the main supply voltage of the board. In deepsleep we turn the supply voltage off to save power, so we have to cut a small trace to disconnect the resistor and use the internal pullup of the microcontroller.

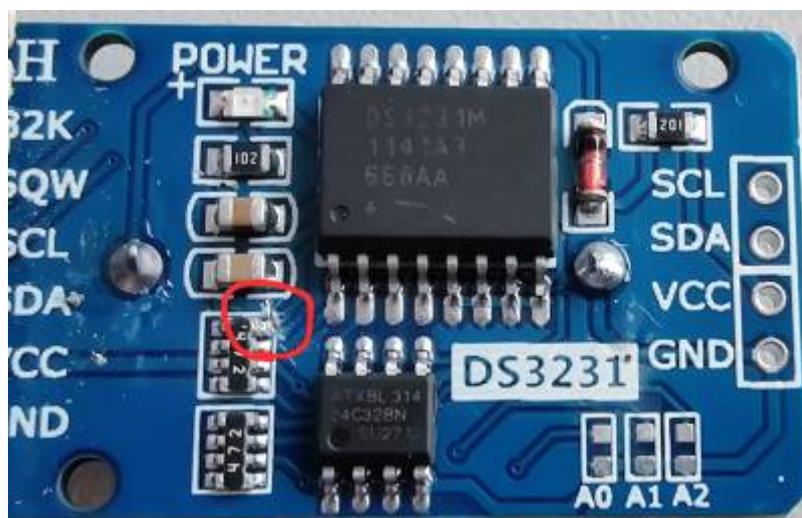

Since the normal gpios of the esp32 lose their state in deepsleep, it is important to use one that is connected to internal rtc for the interrupt. The load cell has to be calibrated with a known weight.

## Power Consumption



From: <https://wiki.eolab.de/> - **HSRW EOLab Wiki**

Permanent link: [https://wiki.eolab.de/doku.php?id=eolab:products:plant\\_pot\\_scale&rev=1709126633](https://wiki.eolab.de/doku.php?id=eolab:products:plant_pot_scale&rev=1709126633)

Last update: **2024/02/28 14:23**

