

# Robomaster TT (Tello) Educational Drones



Software download: <https://www.dji.com/de/robomaster-tt/downloads>

DFRobot General Tutorial [DFRobot Mind+](#)


Mind+ YouTube Tutorial [How to connect and run code on Robomaster Tello Talent on Mind plus software](#)

## Update Drone Firmware

1. **Can only be done through the phone app!**
2. Download the newest Firmware in the App while still connected to the internet - before connecting to the drones wifi
3. Connect to the drones Wifi (TELLO-xxxx) without the extension module connected!
4. Under the app settings update firmware

## Modify Extension Module Wifi AP

1. Connect only the extension module with a usb cable to your PC
2. Open the Mind+ software
3. Under Extensions (Bottom left) select "RoboMasterTT (ESP32)"
4. Then change the Wifi AP to something like below and press upload

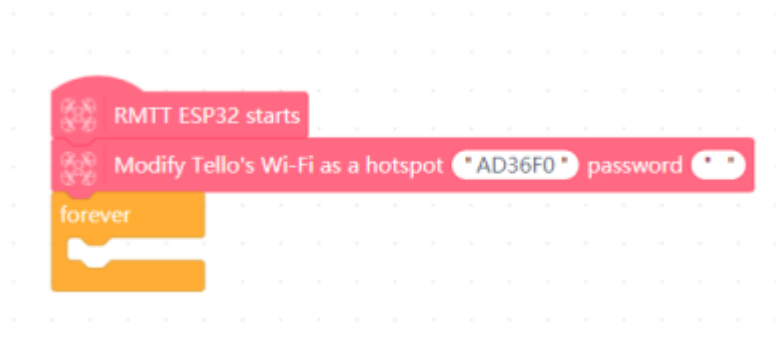

## HINTS

- When the drone is set to STA / connect to router mode with the switch on the extension module, the propellers will start spinning once connected. If you want to stop the propellers simply lift the drone.

## PYTHON

- [DjiTelloPy PyPi](#)
- [DJI TelloPy Docs](#)
- [Conquering Tello Drone Programming with Python](#)

```
from djitellopy import TelloSwarm

# Create a swarm with two Tello drones
swarm = TelloSwarm.fromIps(["192.168.10.1", "192.168.10.2"])

# Connect to the drones
print("Connecting to drones...")
swarm.connect()

print("Battery levels:")
for i, battery in enumerate(swarm.get_battery(), start=1):
    print(f"Tello{i}: {battery}%")

# Execute commands as a swarm
swarm.takeoff()
swarm.parallel(lambda i, tello: tello.move_forward(50))

# Rotate only the second drone
swarm[1].rotate_clockwise(90)

# Land all drones simultaneously
swarm.land()

print("Mission complete!")
```

From:  
<https://wiki.eolab.de/> - HSRW EOLab Wiki

Permanent link:  
<https://wiki.eolab.de/doku.php?id=projects:robomastertt:start&rev=1733942816>

Last update: 2024/12/11 19:46

