


# Cloud Data Processing with NIG

## 1. NIG Stack

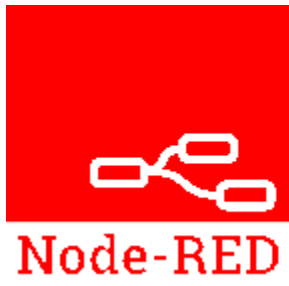

The NIG stack consists of three software packages:

- [NodeRed](#)
- [InfluxDB](#)
- [Grafana](#)

In the IoT world, this is a commonly used combination of software packages. All three are also (mostly) open-source. You can run this stack locally or in the cloud. Because it would be too much for this workshop series, we will not show you how to set this up. But if you want to get this stack up and running yourself, here are some steps that might help you. We encourage you to do some research on this yourself.

1. If you are on Linux, you can forward to step 2. If you are on Windows we recommend installing the Windows-Subsystem-for-Linux (WSL) with Ubuntu as the distribution.
2. Now that we are in our Linux (testing done in Ubuntu) environment, we can install docker. You can follow the steps on the official website: [Install Docker Ubuntu](#). If you are on WSL, every time you start the system you need to restart docker with: `sudo service docker start`
3. Download NIG docker files here:

[Download local NIG files](#)

4. Unpack the files into an empty folder
5. Open your WSL instance/Terminal and navigate to that folder. If you are using WSL you can find all the windows files under `"/mnt/c/"`.
6. `docker compose up`
7. Open the individual application locally:
  1. [NodeRed](#)
  2. [Grafana](#)
  3. [Influx](#)

## 2. NodeRed

[Node-RED](#) is a UI programming tool for writing code with just graphical blocks. With this, you can easily wire together hardware devices with APIs and other online services. Node-RED is all about flows. A flow is really what it says it is. The data flows from an entry point (like MQTT or HTTP) to an endpoint. On the way, you can modify, compare it with other data, or do whatever you want to do with it. The endpoint could also be an outgoing MQTT-Message or HTTP-Request. In our case, you will

probably want to save it permanently in the given influx database and later display it in some way (that is what grafana is for).

- [Documentation \(with a getting started and some tutorials\)](#)

1. Log in with the username nodered and password nodered. You will now see an empty flow.
2. We have to install some special nodes (nodes are the blocks you use for programming) for interacting with the influx database. Click on the burger icon in the top right corner. You will find an option named "Manage palette", click it. In the palette, you can manage all the plugins you currently have installed. You will now see all currently installed nodes/plugins.
3. Click on "Install" in the top bar and search for "influxdb". You will find one named "node-red-contrib-influxdb". Click on the "Install"-button to install it.
4. You can close the palette now. On the left side of your screen, you can find all nodes that are available to you. Scroll down until you find a node called "influxdb out". You can also search for it in the top left corner. When you find it just drag it somewhere into your flow.
5. Now double-click on the node you just dropped. Because you never used it you will have to connect to a new server. Just click on the little pen on the right side of "Server". Here you will have to type in all needed information. These are the same, never mind the group you are in.
  - Version: 2.0
  - URL: <http://influxdb:8086>
  - Token: influx (!This is just for demonstration purposes, in production, you should generate a custom token in the InfluxDB UI!)
  - Uncheck "Verify Server Certificate"
  - Organisation: unicaes
  - Bucket: workshop
  - Measurement: Make up something nice - this is where you will find your data
6. Click on save. The database is now saved in node-red and you can use it on every influxdb-node you want to. If you want to, you can delete the node we just created.
7. Drag in a "mqtt in"-node and connect it to our just created influx node. Double-click to open its settings.
8. Create a new mqtt server connection by clicking the little pen icon again.
9. Here you just need to fill in Server with `broker.hivemq.com` and click Save in the top right corner.
10. In the topic field you need to fill in the `outTopic` you defined earlier in the Arduino sketch. Also, set the Output to `Parsed JSON-Object`. Then you can Save the current settings.
11. All your sensor data should now be saved in the influx database 😊

### 3. InfluxDB

### 4. Grafana

## Recording

## Additional Links

The NIG stack was previously mentioned here:

- [Introduction to IoT - Sensors and Data processing](#)
- [First steps with your NIG](#)

Unfortunately, these guides are **not** up to date anymore, as they use an older version of the InfluxDB. Since Version 2 of that database, some details in the process have changed a bit and there is slightly more work to it now.

From:

<https://wiki.eolab.de/> - **HSRW EOLab Wiki**

Permanent link:

<https://wiki.eolab.de/doku.php?id=latinet:unicaes:workshops:nig&rev=1693524348>

Last update: **2023/09/01 01:25**

